

**SEATOSUMMIT**



**X**POT

Instruction  
Booklet v3

**E** IMPORTANT:

Read instructions before use

**F**

IMPORTANT: Lire attentivement la notice avant toute première utilisation

**D**

ACHTUNG: Bitte lese die Gebrauchsanleitung sorgfältig vor der erstmaligen Nutzung

**ESP**

IMPORTANTE:

Lea y comprenda este manual antes de uso

**JPN**

重要 :


使用前に説明書をお読みください

**CHN**


重要:

使用之前请务必阅读和理解使用说明

Intended for use with camping stoves only.

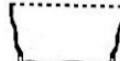

12mm+  
0.5in+

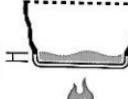

Do not fry or sauté as this may damage the silicone. Internal surface of the aluminum base must be completely covered by water (or similar liquid) up to the level of the silicone.

## E X-POT INSTRUCTIONS

### WARNINGS:

#### General Use:

- Intended for use with camping stoves only. Do not use with microwave ovens, conventional ovens, Dutch ovens or open campfires. Stove systems which normally utilize pots with heat exchangers should not be used with the X-Pot, unless a pot support/pot adaptor is used.

- Pot should be fully expanded when cooking to avoid direct exposure of silicone to flames.

• **The X-Pot is not designed for frying or sautéing.** Sea to Summit offers the X-Pan for this type of cooking use. Frying – including stir-frying – or sautéing may damage the silicone. It is essential that at all times while cooking, the internal surface of the aluminum base is completely covered by water (or similar liquid) up to the level of the silicone.

- Do not secure handles to lid during cooking as this can cause damage to the lid.

- Be aware that silicone walls are collapsible. Do not apply top pressure to walls while cooking as they may collapse.

- Beware that boiling water may cause steam to vent anywhere around the pot rim.

- Always turn off stove before lifting pot or lid. Wait 30 seconds before handling, as pot handles can be hot and steam may be exiting from lid/strainer.

- Align lid so steam/strainer points away from body to enable lifting of pot using handles without hands coming into contact with vented steam.

- Be careful using sharp objects when cooking as they may damage silicone.

#### Heat damage:

- Do not allow the flames from your stove to extend beyond the base of the pot or allow pot to boil dry.

- Low to medium heat output on camp stove is sufficient for obtaining the best cooking results. High heat output may create excess flame that wastes fuel and damages silicone.

- Prolonged exposure to flames may cause the silicone to become brittle and disintegrate.

A white external coating or hardness to touch are signs that the silicone has become brittle. Discontinue use.

#### Pouring:

- Always hold lid securely against the pot when straining or pouring.
- Always pour away from yourself to avoid contact with water and steam. Pour contents slowly and at a shallow angle.
- Beware hot contents may heat lid. Place thumbs on lid locking knobs to reduce contact with hot surface.

#### Care & Cleaning:

- Do not clean X-Pot in a dishwasher.
- Before using pot for the first time wash with hot water and mild detergent and dry immediately.
- Allow unit to cool before cleaning. Do not attempt to rapidly cool pot.
- To clean use warm water and Wilderness Wash or other dish soap.
- Do not use heavy duty scouring pads as they may damage silicone.
- Rinse and dry components completely before storing.

#### Instructions (boiling water):

1. Unlock handles from lid and remove lid.
  2. Gently pull handles away from base to expand silicone walls.
  3. Fill with water, do not fill past 'MAX SAFE FILL' line, and replace lid.
  4. Turn on stove and make sure flames do not extend past base.
- NOTE: Low to medium heat output on camp stove is highly recommended. Excess flame can waste fuel and damage silicone walls.
5. Once boil is complete and stove is off wait 30 seconds before touching handles
  6. Lift pot off stove and pour away from yourself. If using the strainer apply pressure to lid with your thumbs so it does not move while pouring.


#### Warranty:

Sea to Summit Pty Ltd warrants our manufactured product against material and manufacturing defects for the life of the product. Our warranty is valid for the original purchaser. The Sea to Summit warranty excludes wear and tear, minor blemishes that may have resulted from normal use and handling, or improper use and abuse. This warranty does not cover heat and flame damage as a result of exposing silicone walls to direct flame, or heating the X-Pot without liquid inside. For material and manufacturing defect claims, consumers should return the item to the point of purchase for inspection.


Sea to Summit reserves the right to replace or repair the product at our discretion.

**66315091**


Beware that boiling water may cause steam to vent anywhere around the pot rim.

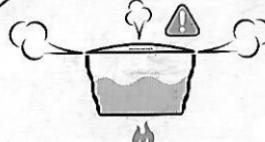

Do not allow the flames from your stove to extend beyond the base of the pot.

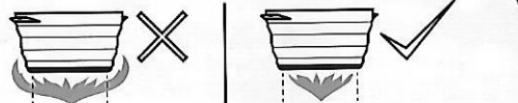

Turn stove off and wait 30 seconds before handling pot.

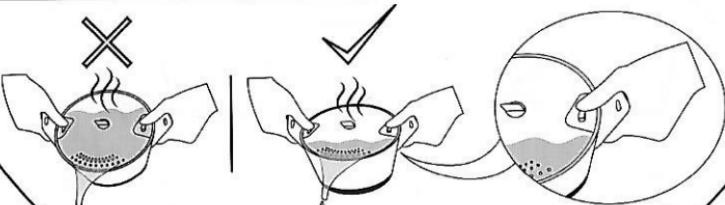

Pour at a low angle to avoid hot contents heating surface near hands. Place thumbs on lid locking knobs to reduce contact with hot surface.

# SEATOSUMMIT XPOT

A collapsible, fully-featured cooking pot

2.8L

325g | 11.5oz

Collapses to 40mm | 1½"



FOOD GRADE  
HEAT RESISTANT  
SILICONE

6063-T6  
Hardened Alloy

